

# accessible ballot marking device

This machine allows voters to mark a ballot privately and independently, by providing a number of alternative ballot marking methods.


## Marking Your Vote:

Once the ballot has been inserted, the machine will allow you to mark your ballot using the touch screen. If using headphones, the ballot will be read to you along with instructions on how to select your vote choice.



## Using the Keypad:

The keypad has different shaped buttons to help you in voting. It can be used to adjust volume, tempo for spoken word, repeat questions, and to mark your vote choices.

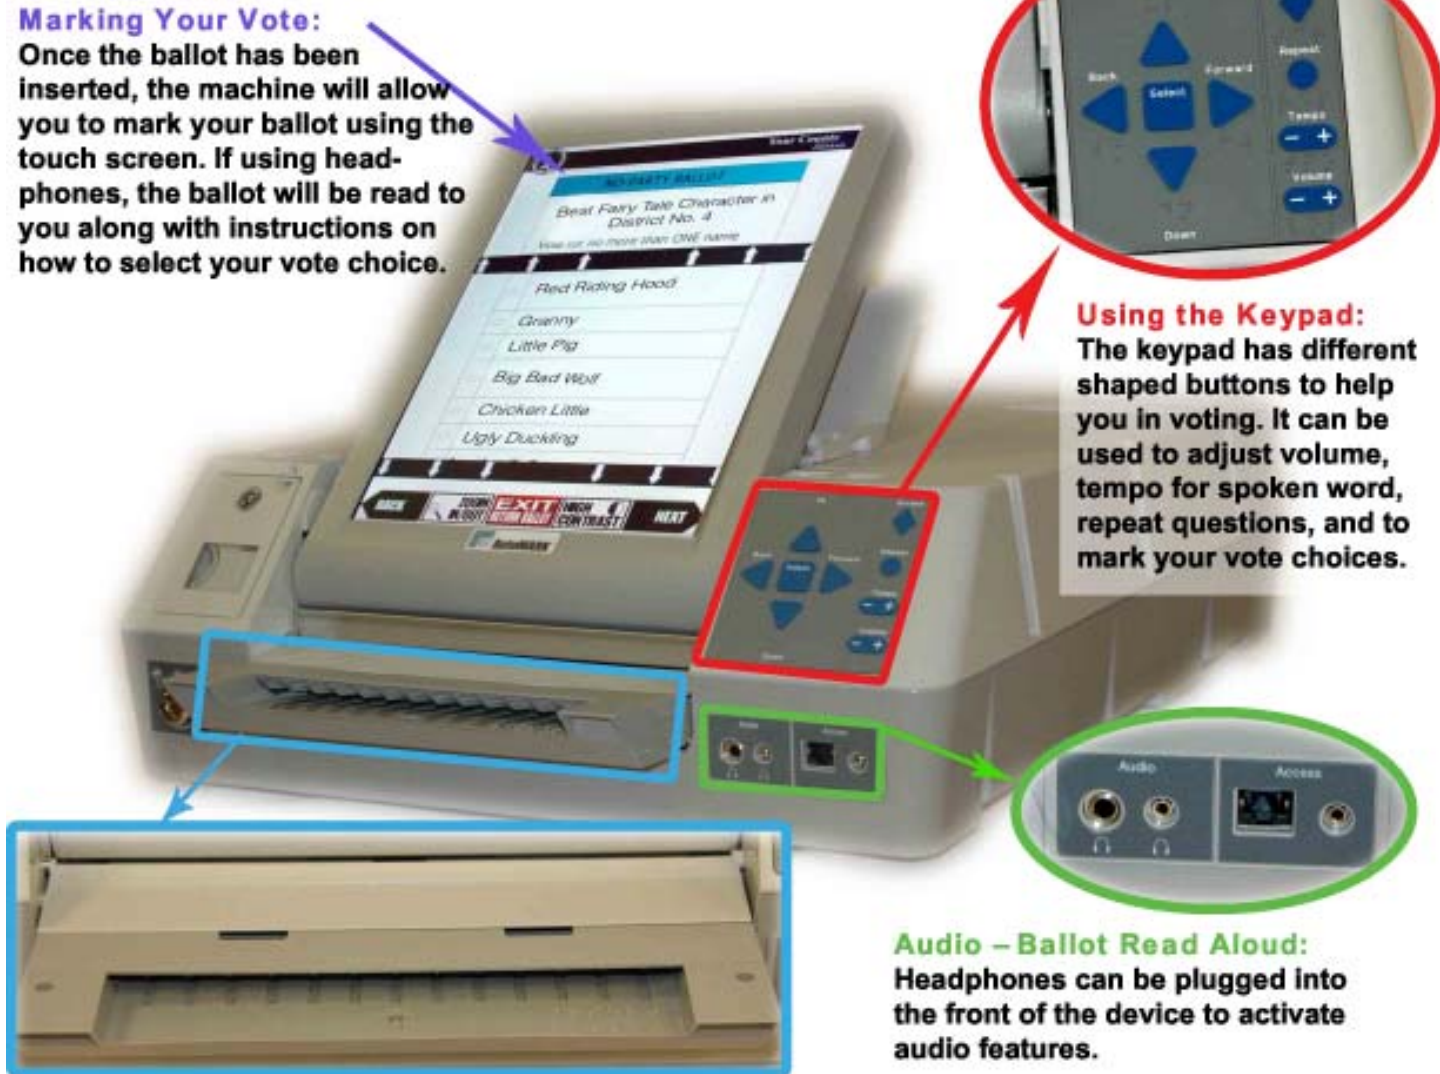

## Inserting Your Ballot:

Insert your ballot into the ballot slot. The machine will pull it forward once it is inserted far enough. This is also where your ballot will be returned.

## Audio – Ballot Read Aloud:

Headphones can be plugged into the front of the device to activate audio features.

## Access — Accessible Devices:

Devices such as two-switch paddles and sip/puff tubes can be used to aid in voting using the jack provided.